

SMS Notification Module



SMS Alarm Notification

Add SMS Functionality to Your Alarming System

Quickly let key people know about any alarm by sending a text message to any cell phone. The Ignition SMS Alarm Notification Module enables both alarm notification and acknowledgment via text messages. You can enable phone-call alerts by adding the Voice Notification Module to your Ignition system.

Notify Users Quickly with a Text Message

By adding the SMS Notification Module to Ignition, you can send and acknowledge alarm notifications via text messaging. SMS notification is an efficient and immediate method that makes it easier for users to respond to alarms no matter where they are.

This module requires the [Alarm Notification Module](#) and a cellular modem.



Get Started

Read more about this module on the [SMS Notification Profile](#) page.



On this page

...

- SMS Alarm Notification
 - Add SMS Functionality to Your Alarming System
 - Notify Users Quickly with a Text Message
- Get Started