

# system.gui.resizeComponent



## Deprecated

As of 7.8.1. See [system.gui.transform\(\)](#) instead.

## Description

Sets a component's size at runtime. The coordinates work in the same way as the `system.gui.moveComponent` function.

## Syntax

### `system.gui.resizeComponent(component, width, height)`

- Parameters

`JComponent` component - The component to resize

`int` width - The new width for the component

`int` height - The new height for the component

- Returns

Nothing

- Scope

Client

## Code Examples

### Code Snippet

```
#This code would go in a Timer's propertyChange script for animation \  
  
if event.propertyName == "value":  
    newWidth = event.newValue;  
    rect = event.source.parent.getComponent("Rectangle")  
    system.gui.resizeComponent(rect, newWidth, 80)
```