

# Managing Users and Roles

## Users and Roles


Security is based on the roles that are assigned to specific users. Roles do not have any structure or hierarchy by default, but can be created. You can create a hierarchy based on users with a greater role being assigned all matching lesser roles.

There isn't a built-in restriction to the number of roles a user can have, so each user can have access to many roles, or none at all.

### Roles and Security

It's important to think about the different roles in your project and how they affect the security of your project. For instance, what level of access a particular area of a project needs may determine the functional type roles that you create, and the different users assigned to each role.

You can manage users and roles using either the Gateway interface, or using the [User Management component](#) inside the Designer or Client. This section shows how to manage users and roles using the Gateway interface.

 When using role-based security in a project, the project stores the name of the role as a string. This means that if you were to modify the name of the role in the Gateway, the role-based security in your project will not update to reflect the new name, and instead will try searching for a role with the original name. Be very careful when modifying the names of roles.


## On this page

...

- Users and Roles
  - Creating a Role
  - Assigning Roles to Users
  - Role Hierarchy
- Managing Users
- User Management Component
  - Using the User Management Component in the Designer and Vision Client
  - Save Failed. You are not authorized...

## Creating a Role

1. On the Gateway Webpage, go to the **Config** section, and choose **Security > Users, Roles** from the menu on the left. The User Sources page is displayed.
2. Click on the **manage users** link for the **User Source** you want to manage.

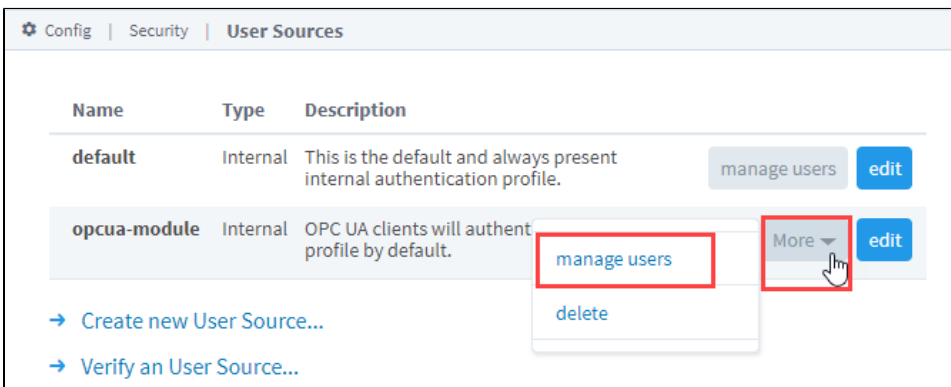

Name	Type	Description	
default	Internal	This is the default and always present internal authentication profile.	<a href="#">manage users</a> <a href="#">edit</a>
opcua-module	Internal	OPC UA clients will authenticate by default.	<a href="#">manage users</a> <a href="#">More</a> <a href="#">edit</a>

[→ Create new User Source...](#)

[→ Verify an User Source...](#)

3. Click the **Roles** tab. Look for the blue arrow at the bottom, and click the **Add Role** link.
4. Name the role by entering it in the **Role Name** field, and click on the **Add Role** button. The role is now available to be associated with specific users.

Users Roles

## Add Role

**Role Properties**

Role Name

< Cancel

Add Role

## Assigning Roles to Users

1. On the Gateway Webpage, go to the **Config** tab, and choose **Security > Users, Roles** from the menu on the left. The User Sources page is displayed.
2. Click on the **manage users** link for the **User Source** you want to manage.
3. Click the **Edit** link for the User you want to edit, or click the blue **Add User** link to add a new user. (When adding a new user, you can also add their roles at the same time).

Config | Security | User Sources

Users Roles

Username	Name	Roles	Contact Info	Schedule	
admin		Administrator, Operator		Always	<a href="#">Edit</a> <a href="#">Delete</a>
guest				Always	<a href="#">Edit</a> <a href="#">Delete</a>

[Add User](#)

4. If you're creating a new user, the Add User window will open. Enter the user's properties including the roles you want this user to have. If no roles have been created, then follow the instructions in the Creating a Role section from above. If your user already exists and you simply want to modify their roles, the Edit User window will open. (The Edit User window and the Add User window look identical).

To assign a role, there is a **Roles** property with a list of roles that have already been created. Select the role(s) that you want this user to have. (It's not required for a user to have a role, but be aware that they might not have access to an area of the project that requires them to have a role).

Roles

Administrator  
 guests
  Maintenance  
 Operator
  Prod\_Sups  
 Test\_Group

### **Administrator Role**

When a project is first created, the **Administrator** role is the only role available, and no other roles will appear until they are created. When more roles are created, they appear as check boxes just like the Administrator option.

5. Click either **Add User** if you adding a new user, or **Save Changes** if you are modifying a user's role(s). The user now has the privileges associated with the selected role(s).

## Role Hierarchy

Often you might want to have one role that includes all the permissions for another role, i.e., Supervisor can do everything that Administration and Maintenance roles can do. In the Designer, access to Components can be restricted to specific security roles. You can give any Supervisor both of the Administration and Maintenance.

## Managing Users

User Sources support managing the users and roles from within Ignition to varying degrees. Some User Sources are fully manageable, meaning that you can administer the users, roles, contact info, and so on from within the Ignition Gateway, as well as inside a Vision Client. Other User Sources do not support this at all, while yet others only partially support it. Make sure you understand how and where the administration takes place before you choose a User Source type.

For User Sources that support it, you can manage the users and roles from within the Ignition Gateway's web configure interface under **Config > Security > Users, Roles**. Click on the **manage users** link for the **User Source** you want to administer.


Often, it is desirable to let some management or administrative users of a Vision project manage other users without having to log into the Gateway's Configure section. To do this for a User Source that supports being managed, you can simply use the built-in [User Management Panel](#) that comes with the Vision Module.


## User Management Component

Ignition has a special User Management component in the Vision Module that allows you to add, modify, and delete users and roles (and more) inside the Designer and the Client. This is simple to set up and use.

## Using the User Management Component in the Designer and Vision Client

1. In Designer, go to the Project Browser and then to Vision.
2. Create a new Window or open an existing one.
3. Drag a [User Management](#) component to your window. This component will automatically point to the default user source being used by your project. You can change the User Source property if needed.
4. If you already have some users and roles setup using the Gateway Webpage, you will see them in the User Management component. If you don't have any users or roles setup, you can create them here. Use the icons on the right side to add, edit, or delete a user or role.

5. To add a new user, put the Designer in **Preview Mode**. Click the the plus  icon next next to the user section.

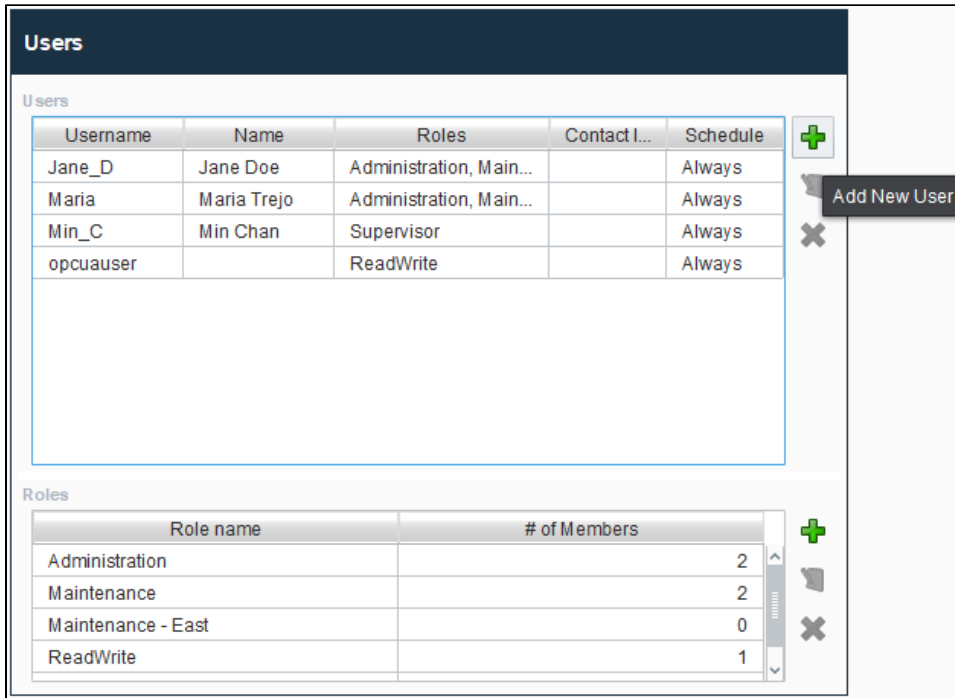

The screenshot shows the 'Users' management interface. At the top, there is a dark blue header with the word 'Users'. Below the header, there is a section titled 'Users' containing a table with the following data:


Username	Name	Roles	Contact I...	Schedule
Jane_D	Jane Doe	Administration, Main...		Always
Maria	Maria Trejo	Administration, Main...		Always
Min_C	Min Chan	Supervisor		Always
opcuuser		ReadWrite		Always

To the right of the table is a green plus icon and a grey 'Add New User' button. Below the 'Users' section is a section titled 'Roles' containing a table with the following data:

Role name	# of Members
Administration	2
Maintenance	2
Maintenance - East	0
ReadWrite	1

To the right of the 'Roles' table is a green plus icon and a grey 'Add New Role' button.

6. The Add User window will open. At a minimum, enter the **Username** and **Password**. All other properties are optional. When finished, click **Save**.

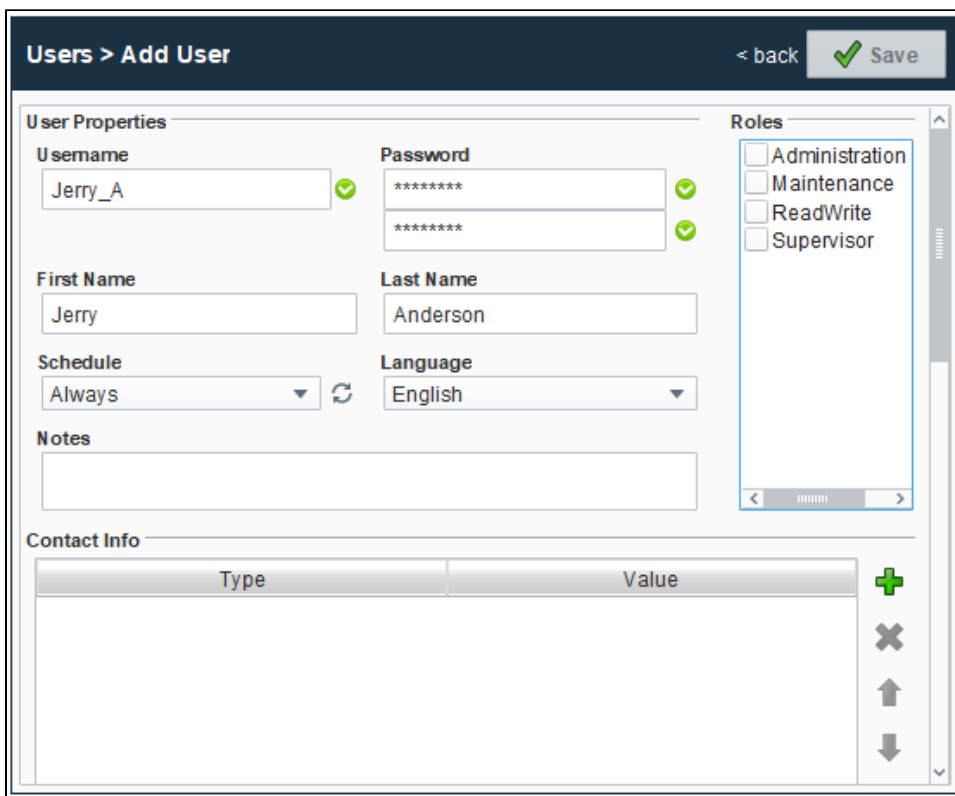

The screenshot shows the 'Users > Add User' form. At the top, there is a dark blue header with the text 'Users > Add User' and a '< back' button. To the right of the header is a green checkmark icon and a 'Save' button. The form is divided into several sections:

- User Properties:** Contains fields for Username (Jerry\_A), Password (masked with asterisks), First Name (Jerry), Last Name (Anderson), Schedule (Always), and Language (English). There are green checkmarks next to the Username and Password fields.
- Roles:** A list of roles with checkboxes: Administration, Maintenance, ReadWrite, and Supervisor. The 'Administration' checkbox is checked.
- Contact Info:** A table with columns 'Type' and 'Value'.

7. To add a new role, make sure the Designer is in **Preview Mode**. Click the the plus  icon next to the role. The Add Role window will open.
8. Enter the name of the new role. Click **Save**.

**Users > Add Role** < back

Role name

Maintenance - East

9. Now you can see the user and role that were just added in the User Management window.

**Users**

Users

Username	Name	Roles	Con...	Sch...	
Jane_D	Jane Doe	Administration, Maintenance, ...		Alw...	
Jerry_A	Jerry Anders...	Maintenance - East		Alw...	
Maria	Maria Trejo	Administration, Maintenance, ...		Alw...	
Min_C	Min Chan	Supervisor		Alw...	
opcuser		ReadWrite		Alw...	

Roles

Role name	# of Members	
Administration	2	
Maintenance	2	
Maintenance - East	1	
ReadWrite	1	

## Save Failed. You are not authorized...

By default, changes to the system's user source may not be made from this component. This prevents users from locking themselves out of the Gateway, or give themselves access to the Gateway.

However, this behavior can be overridden from the Gateway: **Config > System > Gateway Settings** page, and setting the checkbox for the **Allow User Admin** property. This allows for the administration of the Gateway's system user source from the Designer and the Client. Unless this is enabled, the Vision Module's User Management component is prevented from modifying the Gateway system's selected user source and you will see an error at the bottom of the component if it is attempted.

Alternatively, you can simply have a separate User Source for the Gateway. This allows you to have a User Source containing all users that should have client access, and a Gateway-specific User Source that allows access to the Gateway and Designer. This would potentially entail changing the System's User Source: **Config > System > Gateway Settings > System User Source** in the Gateway Webpage.

#### Related Topics ...

- [User Sources](#)
- [Internal Authentication](#)
- [User Management](#)
- [User Schedules](#)