


Installing Edge

Ignition Edge was revised and expanded significantly as of release 8.0.10. This deprecated page is for User Manual legacy records.

Downloading and installing Ignition Edge works in much the same way that installing Ignition on any operating system works. While Edge is a great companion for a minimal system such as an ARM device, it can be installed on just about any operating system.

 To install Edge on an ARM processor, you need the Edge-specific zip file named **Ignition-Edge-linux-armhf-x.x.x.zip** where x.x.x is the version number.

1. Download the Ignition Edge zip file from the Inductive Automation website (ia.io).
 - a. Click Download Ignition in the upper right corner.
 - b. Click the Other operating systems and version link.

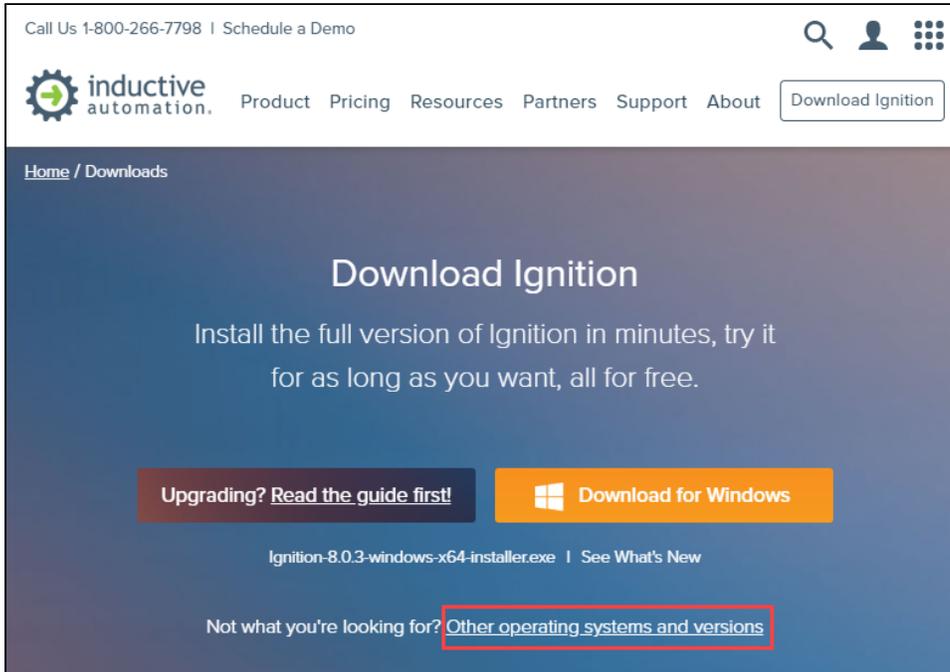

Call Us 1-800-266-7798 | Schedule a Demo

inductive automation. Product Pricing Resources Partners Support About [Download Ignition](#)

Home / Downloads

Download Ignition


Install the full version of Ignition in minutes, try it for as long as you want, all for free.

[Upgrading? Read the guide first!](#) [Download for Windows](#)

Ignition-8.0.3-windows-x64-installer.exe | [See What's New](#)

Not what you're looking for? [Other operating systems and versions](#)

- c. Scroll down to the operating system and click the Ignition Edge system Installer file.

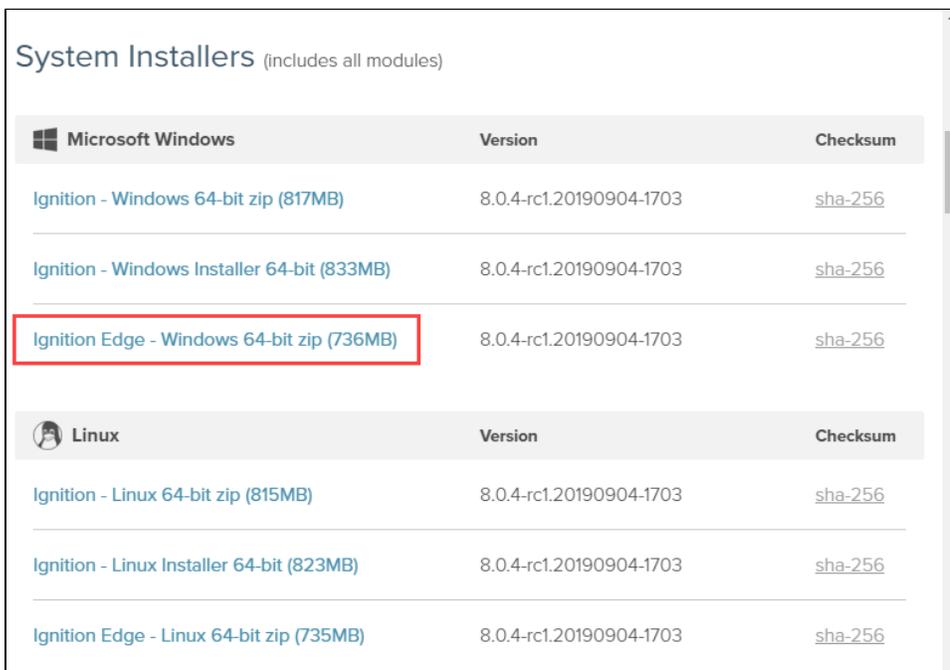


System Installers (includes all modules)

Microsoft Windows	Version	Checksum
Ignition - Windows 64-bit zip (817MB)	8.0.4-rc1.20190904-1703	sha-256
Ignition - Windows Installer 64-bit (833MB)	8.0.4-rc1.20190904-1703	sha-256
Ignition Edge - Windows 64-bit zip (736MB)	8.0.4-rc1.20190904-1703	sha-256

Linux	Version	Checksum
Ignition - Linux 64-bit zip (815MB)	8.0.4-rc1.20190904-1703	sha-256
Ignition - Linux Installer 64-bit (823MB)	8.0.4-rc1.20190904-1703	sha-256
Ignition Edge - Linux 64-bit zip (735MB)	8.0.4-rc1.20190904-1703	sha-256

The zip file will be downloaded onto your computer.

2. Extract the zip file contents. (For example, in Windows, right click on the file and select **Extract**.)

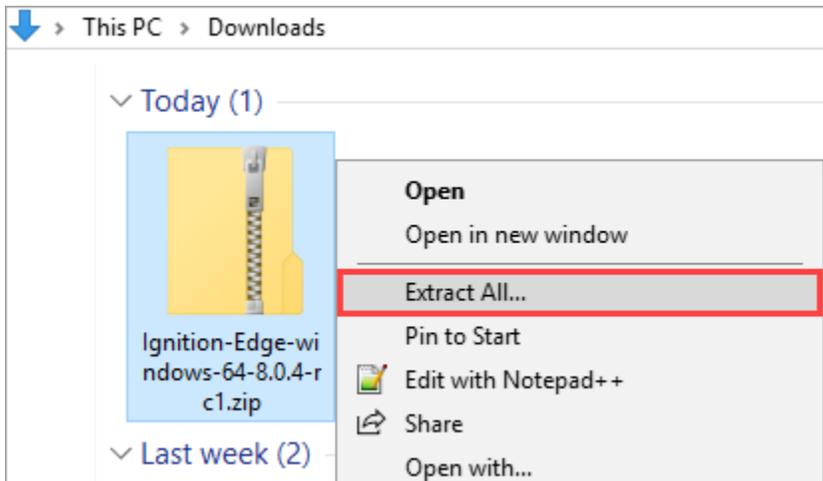

3. Open the folder with the extracted files and double click on the **install-ignition.bat** file.
4. Once Edge is installed, you need to start Ignition Edge. Double click on the **start-ignition.bat** file.

Once the installation process is done and the Edge Gateway has finished starting, navigate to localhost:8088 in a web browser. You'll be asked to agree to the License Agreement. You'll also be asked to create a username and password. Next click the Gateway Homepage button to go to the Ignition Edge Gateway Webpage.



Congratulations, Ignition 8.0.6 is installed and running!

Whether you need an OPC-UA server, a SQL datalogger, an HMI, or a full-blown SCADA or MES solution, Ignition can handle it. **Here are a few common steps to help get you started**

Setup a Device

Connectivity is what Ignition is all about. Connect to a PLC on your network using our internal or 3rd party OPC server.

Activate a License

You may use the trial version of Ignition as long as you'd like to get a feel for our product. If you already have a license, activate here.

Edit Gateway Settings

Configure the Gateway for your specific needs.

Gateway Network

Need to configure this with a Gateway Network? We have your back.

[Gateway Homepage](#)

You will notice the [Edge Gateway](#) is green instead of our usual orange color, so you instantly know this is an Edge install instead of a full installation of Ignition.

Once Edge is installed, you can start using it. It has the same two hour trial as the full install of Ignition.

Related Topics ...

- [Edge Gateway](#)