

# Windows - Install

Before you install Ignition, make sure you meet the minimum system requirements:

- Dual-Core Processor (64)
- 4GB RAM
- 10GB free HD space


Also, ensure you have **Administrator privileges** to run the Ignition installer.

## On this page ...


- [Download and Install Ignition on Windows](#)
- [Automated Installation on Windows](#)
- [Uninstalling Ignition on Windows](#)
  - [Run the Uninstaller for Windows](#)

## Download and Install Ignition on Windows

1. Go to the Inductive Automation website at [www.inductiveautomation.com](http://www.inductiveautomation.com)
2. Click the **Download Ignition** button in the upper right corner of the page. The browser will determine what operating system you're running and will bring up **Download for Windows**.
3. Click **Download for Windows**. If you want to see what other operating systems are supported, click on the [Other operating systems and versions](#) link and scroll down to System Installers.

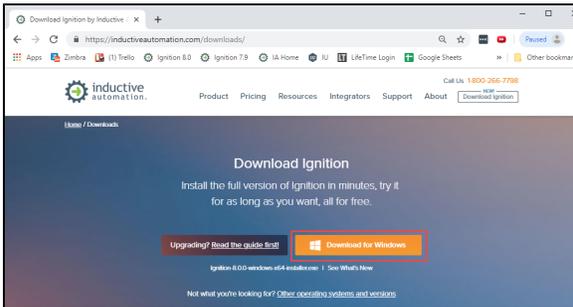

4. Run the downloaded file **Ignition-X.X.X-windows-x64-installer.exe** (found on the lower-left of the window if using Chrome), or go to your downloads folder and double-click the file to start installation.
5. The **Setup** window welcomes you to the Ignition Setup Wizard. To begin the installation, click **Next**.

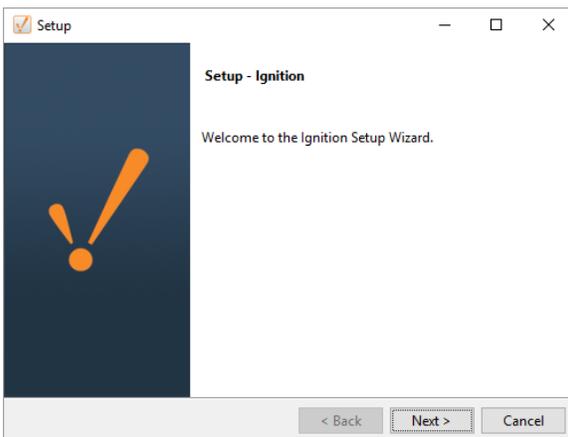


6. The **Installation Directory** window is displayed. By default, Ignition is installed under your Program Files folder: **Program Files\Inductive Automation\Ignition**. This is usually a good choice. To accept the default Installation Directory, click **Next**.




## Installing Ignition on Windows


[Watch the Video](#)

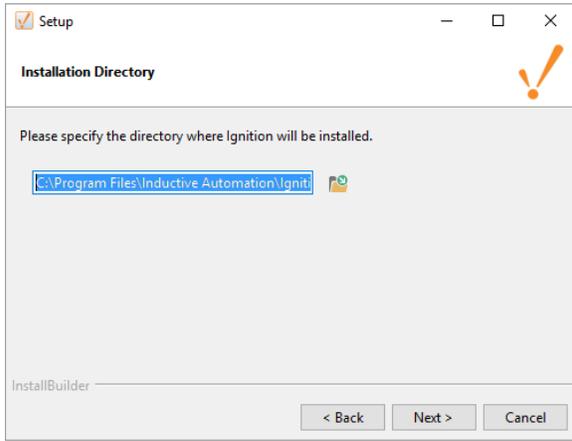


7. The **Installation Mode** window is displayed. Select either the **Typical** or **Custom** mode. The **Typical** installation includes Ignition with most of the commonly used modules. The **Custom** installation lets you control and individually select the modules that you want installed. (Both options are shown in this step). If you choose the Typical installation, click **Next**.

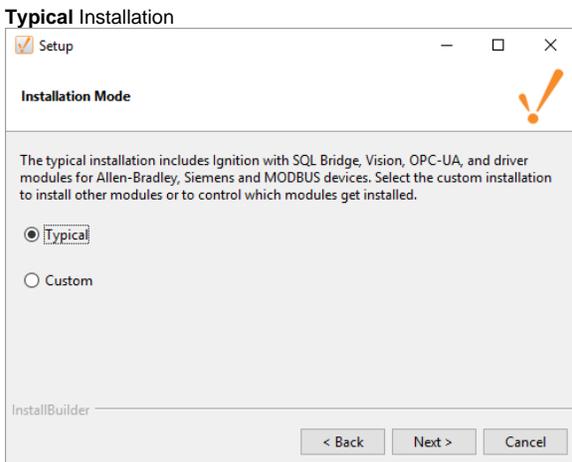


If you select **Custom** mode, check the box for the modules you want to install and uncheck those modules you don't want installed as part of your Custom Ignition installation. To see a brief description of the module, click on the module name. If you choose the Custom installation, click **Next**.

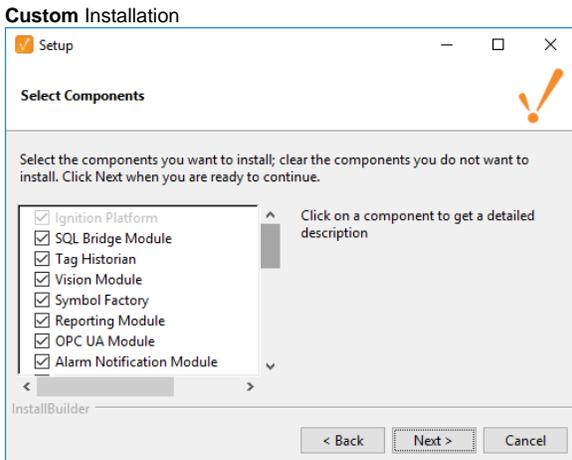


8. Setup Wizard shows Ignition is now **Ready to Install**. If you decide to change your selections, click **Back** to go back and make your changes. Click **Next** to continue.

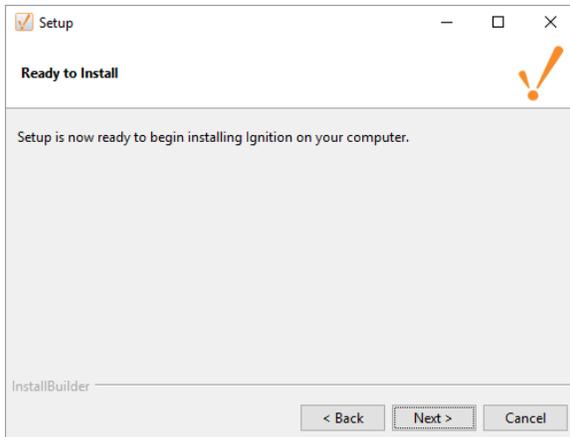


9. Ignition will install the selected modules. When installation is complete, click **Next**.

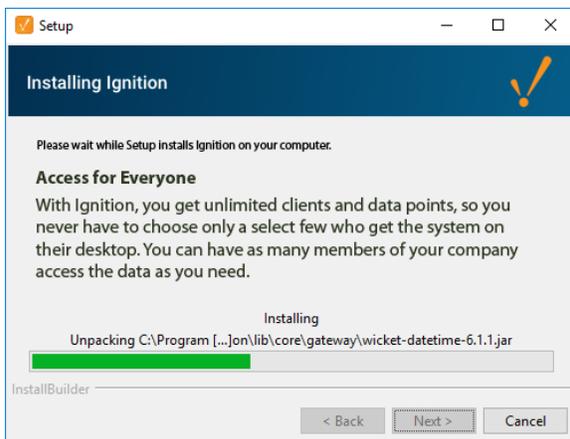


10. After Setup Wizard shows Ignition installation is finished, make sure that the check box for **Start Ignition now** is selected, then click **Finish**.

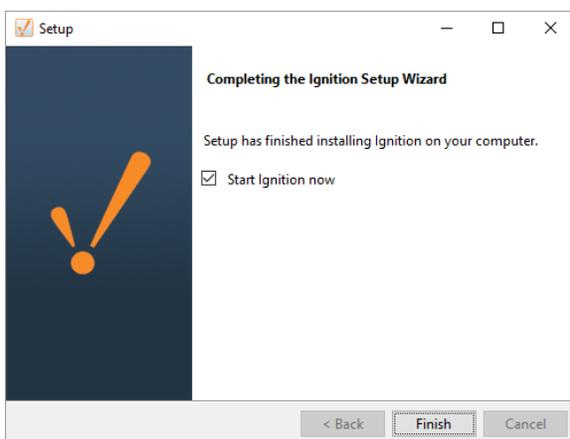

11. Once Ignition is installed, your default web browser will open and you will be greeted with a **Welcome to Ignition** message. Click **Get Started**.

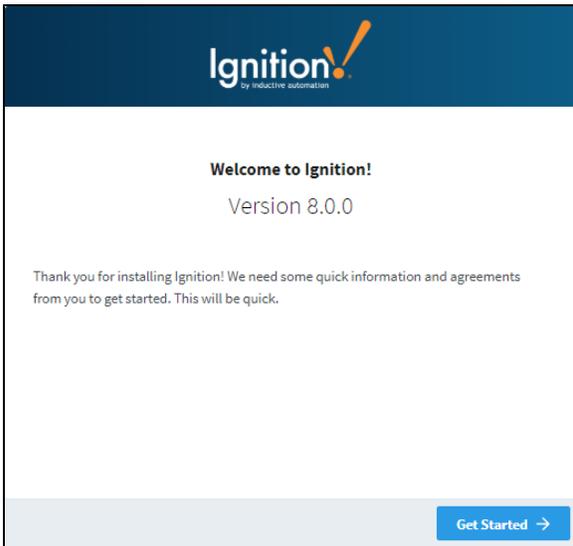

12. The **End User License Agreement (EULA)** window will be displayed. Click the button acknowledging you have read and agree with the terms and conditions, then click **Next**.

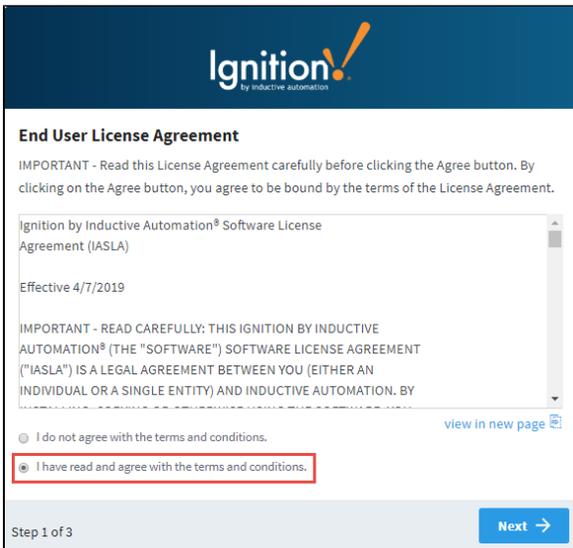

13. An **Account Setup** window will open for you to enter your first user. This first user will be the main / administrator account with full privileges in Ignition. Enter a **username** and **password** for your administrator, and click **Next**.

**Ignition!**  
by inductive automation

### Account Setup

Take a moment to create your first user account. This user, by default, will have access to full Administrative privileges in Ignition. This can all be edited later in the Gateway.

Create Username

Enter Password

Password again

Step 2 of 3 [Next ->](#)

14. The HTTP Configuration window will open for you to set your Gateway Ports. The default HTTP Port is 8088, and the default HTTPS Port is 8043. Click **Next** to continue.

**Ignition!**  
by inductive automation

### Http Configuration

Here you can configure which ports you would like the Ignition Gateway to bind to for Http and Https.

HTTP Port

HTTPS Port

Step 3 of 3 [Next ->](#)

15. The **Setup Completed** window will be displayed, and now you can **Start the Gateway**.


**Ignition!**  
by inductive automation

## Setup Completed


You've completed setting up your Ignition Gateway.

[Start Gateway](#)

A splash screen informs you that Ignition is starting. This may take a few minutes to finish.

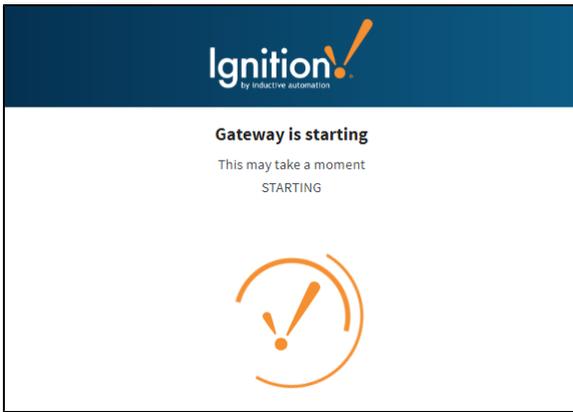

16. That's it! Ignition Installation is complete and the Gateway is then launched. You will be presented with the following **Congratulations** window to complete your configuration setup. You can click a link to **Setup a Device**, **Activate a License**, **Connect to a Database**, **Edit Gateway Settings**, or go to the Gateway **Homepage** where you can also complete all these steps, and access some of our resources such as the Ignition User Manual and IU videos.

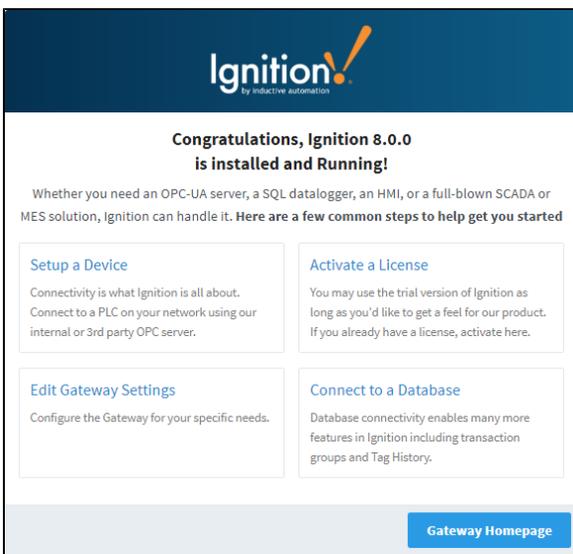

Your web browser opens the Gateway home page at **http://localhost:8088**. Sign in using the credentials for the administrator or user with full privileges for the Gateway as shown in Step 13 above.

The screenshot shows the Ignition software interface. At the top left is the Ignition logo. The top right has a 'Help' link and a 'Get Design' button. Below the logo is a navigation bar with 'Home' and 'Get Started' links. A green banner below the navigation bar displays 'Trial Mode 1:56:16' and a message: 'We're glad you're test driving our software. Have fun.' with an 'Activate Ign' button. On the left side, there is a sidebar with 'Status' and 'Config' options. The main content area is divided into several sections:

- Download Ignition Designer Launcher:** A card with an orange wrench icon, the text 'Ignition Designer Launcher' and 'Download the Ignition Designer Launcher to create or modify your projects.', and a blue 'Download' button.
- Download Application Launchers:** Two cards side-by-side. The left one is for 'Vision Client Launcher' with a dark blue icon and a 'Download Vision Client Launcher' button. The right one is for 'Perspective Session Launcher' with a dark blue icon and a 'View Projects' button.
- Learn Ignition:** A section with introductory text: 'Take advantage of our tools to get designing quickly and take your ideas from concept to reality. The User Manual is a wealth of easily searchable knowledge and the Inductive University has hundreds of short videos covering the basics of Ignition.' Below this are four resource cards:
  - Quick Start Guide:** Features the Ignition logo and text: 'With a wealth of easily searchable knowledge the Ignition user manual has everything you need to get started and get your questions answered.'
  - Inductive University:** Features the IU logo and text: 'IU has more than 600 searchable videos and 20 courses to help you learn how to use Ignition at your own pace on any device.'
  - Product Documentation:** Features an icon of hexagons and text: 'Learn more about each Ignition module and what you can do with it.'
  - Appendix:** Features an icon of a document and text: 'A complete reference for components, expressions, and scripting functions in Ignition.'

At the bottom of the interface, there is a footer with the text 'Ignition by Inductive Automation. Copyright © 2003-2020. All rights reserved. View license' and logos for 'inductive automation' and 'Ignition!'.

Ignition installs itself as a Windows Service (**Start > Control Panel > Administrative Tools > Services > Ignition Gateway**), so it starts automatically when your computer starts up.

## Automated Installation on Windows

You can automate Ignition installation across different machines using scripts. Ignition is then installed silently from a command shell without showing any user prompts. Keep in mind that the installer cannot automatically start the Gateway after a silent installation.

You can use the following command to start the Gateway:

```
net start ignition
```

### Command line example:

```
Ignition-8.x.x-windows-x64-installer.exe --mode unattended --prefix "C:\some folder" --unattendedmodeui none  
net start ignition
```

### Flags:

-- mode unattended (ensures that no prompts appear during installation)  
-- prefix "C:\some folder" (optional flag; if a value is set, then Ignition is installed in the specified folder, otherwise Ignition is installed in a default location under C:\Program Files)  
-- unattendedmodeui none | minimal (the none flag does not display any sort of graphic during installation; the minimal flag displays a small progress bar and nothing else)

## Uninstalling Ignition on Windows



### Before you uninstall Ignition

Be sure to back up your Gateway and deactivate your Gateway license.

During a new Ignition installation, an uninstaller executable is created.

When Ignition is uninstalled, the settings database and folder in /data is backed up to /data\_<current date>, and modules and user-supplied JDBC jars in /user-lib are backed up to /user-lib\_<current date>. Also, the Ignition service is removed from Windows installations automatically.

### Run the Uninstaller for Windows

1. Open the Start menu and navigate to **All Programs > Inductive Automation > Ignition**.
2. Select **Uninstall Ignition**.

The uninstaller wizard guides you through the uninstallation process.

You can also uninstall Ignition from the Windows **Control Panel > Programs and Features** section.

### Related Topics ...

- [Windows - Upgrade](#)